


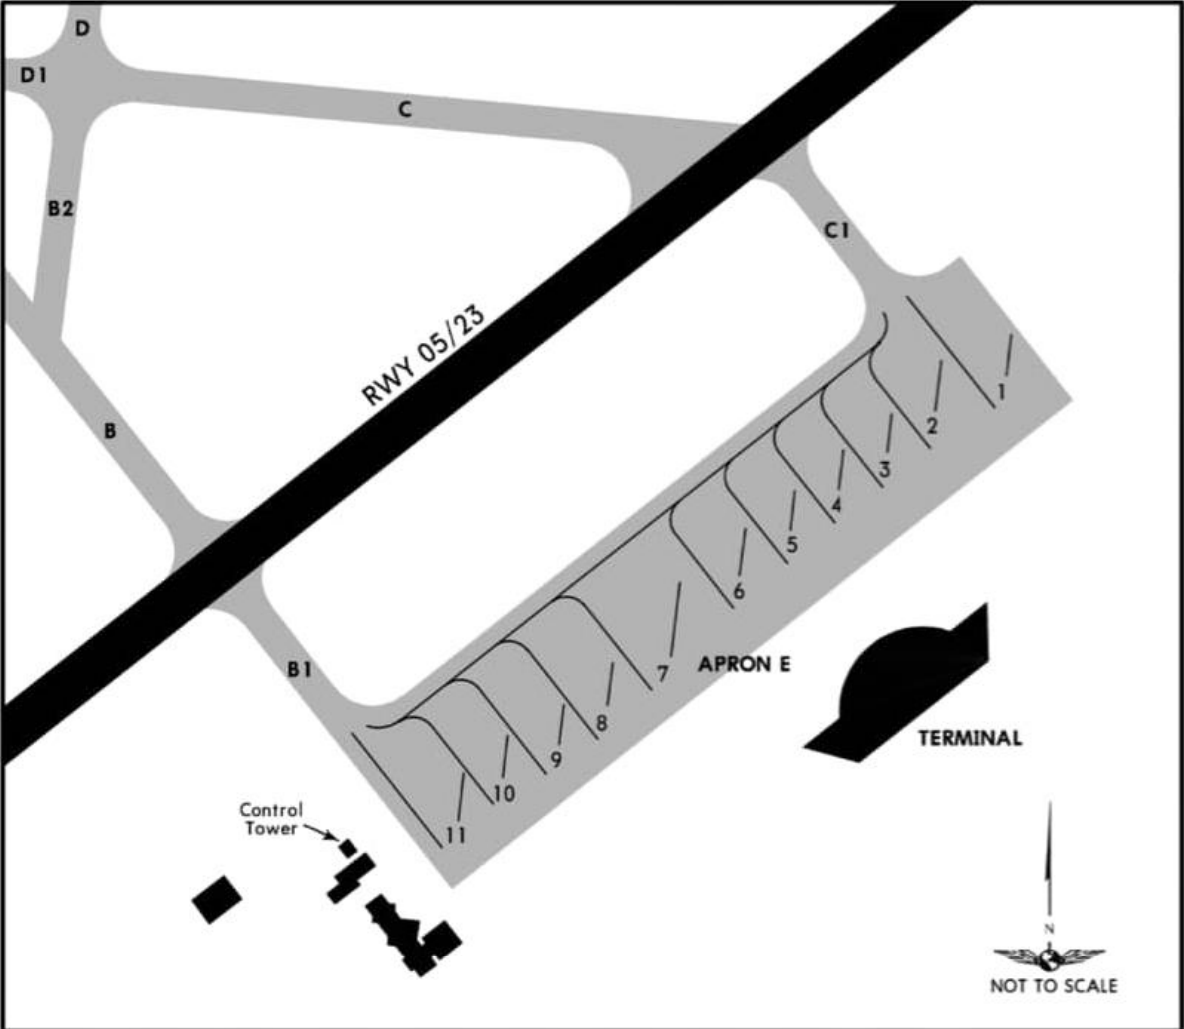

INS COORDINATES							
STAND No.		COORDINATES		STAND No.		COORDINATES	
1		N36 49.6	E007 49.4	9		N36 49.4	E007 49.1
2		N36 49.6	E007 49.3	10, 11		N36 49.4	E007 49.0
3		N36 49.6	E007 49.2				
4, 5		N36 49.5	E007 49.2				
6 thru 8		N36 49.5	E007 49.1				

